


Set inspire Modbus setting to -


Protocol - SMT-UI
Address - 1
Baudrate - 9600
Parity - None
Data Bits 8
Stop Bits 1

Set SMT-UI-DK DIP 6 to on

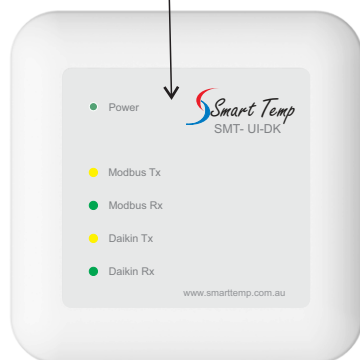

Modbus
B A

Daikin
P2 P1

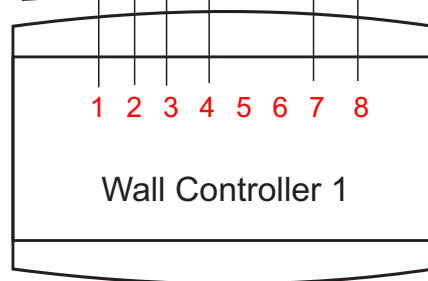

Daikin Indoor

P1
P2

24V
Supply

24V
24C

Smart Temp
Inspire UCC

Set Inspire Dip Switches
1, 2 & 3 ON

Power ■
Data OK ■
Fan ■
Cooling ■
Heating ■
Error ■



Internal Wiring

Wall Controller 1
1 2 3 4 5 6 7 8
Wall Controller 2
1 2 3 4 5 6
A B

Using the OEM Daikin Wall controller, you may need enter the Daikin service menu and set the temperature to be read at the wall controller - not the Internal sensor.

Set Mode 20 to 2 or 3